



1862030

Video Station-Chestnut

Parts and Hardware List

A.	Top	1 pc
B.	Bottom	1 pc
C.	Left Side Panel	1 pc
D.	Right Side Panel	1 pc
E.	Left Door	1 pc
F.	Right Door	1 pc
G.	Divider	1 pc
H.	Fixed Shelf	1 pc
I.	Adjustable Shelf	1 pc
J.	Back Panel	1 pc
K.	Console Tray	1 pc
L.	CD Tray	1 pc
M.	Drawer	1 pc
N.	Lock Casters	2 pcs
O.	Back Casters	2 pcs
P.	Connecting Bolts	16 pcs
R.	Eccentric Cams	16 pcs
S.	Plastic Caps	16 pcs
T.	Wood Screws	16 pcs
U.	Confirmat Screws	2 pcs
V.	Allen Head Bolts	8 pcs
W.	Lock Washers	8 pcs
X.	Flat Washers	24 pcs
Y.	Allen Wrench	1 pc
Z.	Shelf Supports	4 pcs
ZA.	Phillips Head Screwdriver	1 pc
ZB.	Flat Head Screwdriver	1 pc

* Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.

* Use the hardware illustrations to determine correct piece and size.

* This item should be assembled on a soft surface to prevent scratching the finish during assembly.

* This item may require periodic tightening.


* This item is to be assembled by an adult and is not intended to be taken apart by a child.




1862030

Video Station-Chestnut

Hardware Illustrations




T. Wood Screw

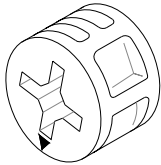


R. Eccentric Cam




P. Connecting Bolts




X. Flat Washer




W. Lock Washers




U. Conformat Screw

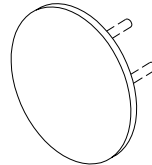

S. Plastic Caps



Z. Shelf Supports

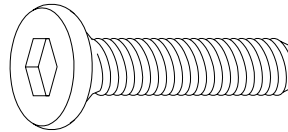

V. Allen Head Bolts



1862030

Video Station-Chestnut

Attach Back Panel & Fixed Shelf with Divider

Parts required

G.	Divider	1 pc	V.	Allen Head Bolts	2 pcs
H.	Fixed Shelf	1 pc	W.	Lock Washers	2 pcs
J.	Back Panel	1 pc	X.	Flat Washers	2 pcs
P.	Connecting Bolts	2 pcs	Y.	Allen Wrench	1 pc
R.	Eccentric Cams	2 pcs	ZB.	Flat Head Screwdriver	1 pc
S.	Plastic Caps	2 pcs			

1. **Insert Connecting Bolts (P)** Insert the Connecting Bolts (P) into the pre-threaded holes in the Back Panel (J) by using Flat Head Screwdriver (ZB). See Illustration #1.
2. **Attach Divider (G) with Back Panel (J)** Align the Connecting Bolts (P) in the Back Panel (J) with the pre-drilled holes in the Divider (G). Be sure the dowels in the Divider (G) align with the pre-drilled holes in the Back Panel (J). Insert the Eccentric Cams (R) into the pre-drilled holes in the Divider (G). Note: the arrow of Eccentric Cams (R) should point towards Connecting Bolts (P). Use the Flat Head Screwdriver (ZB) to adjust the Eccentric Cams (R) and lock the Connecting Bolts (P) in place by turning in a clockwise direction. Cover all the Eccentric Cams (R) with the Plastic Caps (S). See Illustration #1.
3. **Attach Divider (G) with Fixed Shelf (H)** Align the pre-threaded holes in the Divider (G) with the pre-drilled holes in the cleats on the bottom of the Fixed Shelf (H). Be sure the dowels in the Fixed Shelf (H) align with the pre-drilled holes in the Divider (G). Secure with Allen Head Bolts (V), Lock Washers (W), & Flat Washers (X) by using Allen Wrench (Y). See Illustration #1.

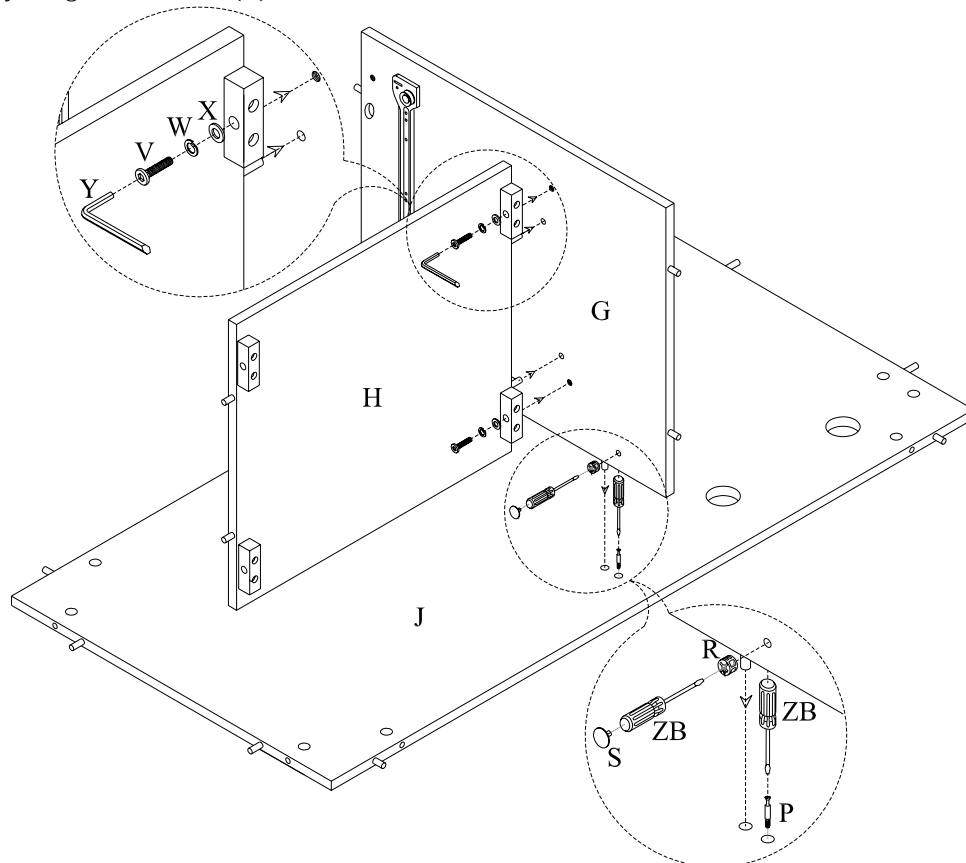


Illustration #1



1862030

Video Station-Chestnut

Attach Back Panel with Bottom

Parts required

B.	Bottom	1 pc	R.	Eccentric Cams	2 pcs
G.	Divider	1 pc	S.	Plastic Caps	2 pcs
J.	Back Panel	1 pc	ZB.	Flat Head Screwdriver	1 pc
P.	Connecting Bolts	2 pcs			

4. **Insert Connecting Bolts (P)** Insert the Connecting Bolts (P) into the pre-threaded holes in Bottom (B) by using Flat Head Screwdriver (ZB). See Illustration #2.
5. **Attach Bottom (B) with Back Panel (J)** Align the Connecting Bolts (P) in the Bottom (B) with the pre-drilled holes in the Back Panel (J). Be sure the dowels in the Back Panel (J) and Divider (G) align with the pre-drilled holes in the Bottom (B). Insert the Eccentric Cams (R) into the pre-drilled holes in the Back Panel (J). Note: the arrow of Eccentric Cams (R) should point towards Connecting Bolts (P). Use the Flat Head Screwdriver (ZB) to adjust the Eccentric Cams (R) and lock the Connecting Bolts (P) in place by turning in a clockwise direction. Cover all the Eccentric Cams (R) with the Plastic Caps (S). See Illustration #2.

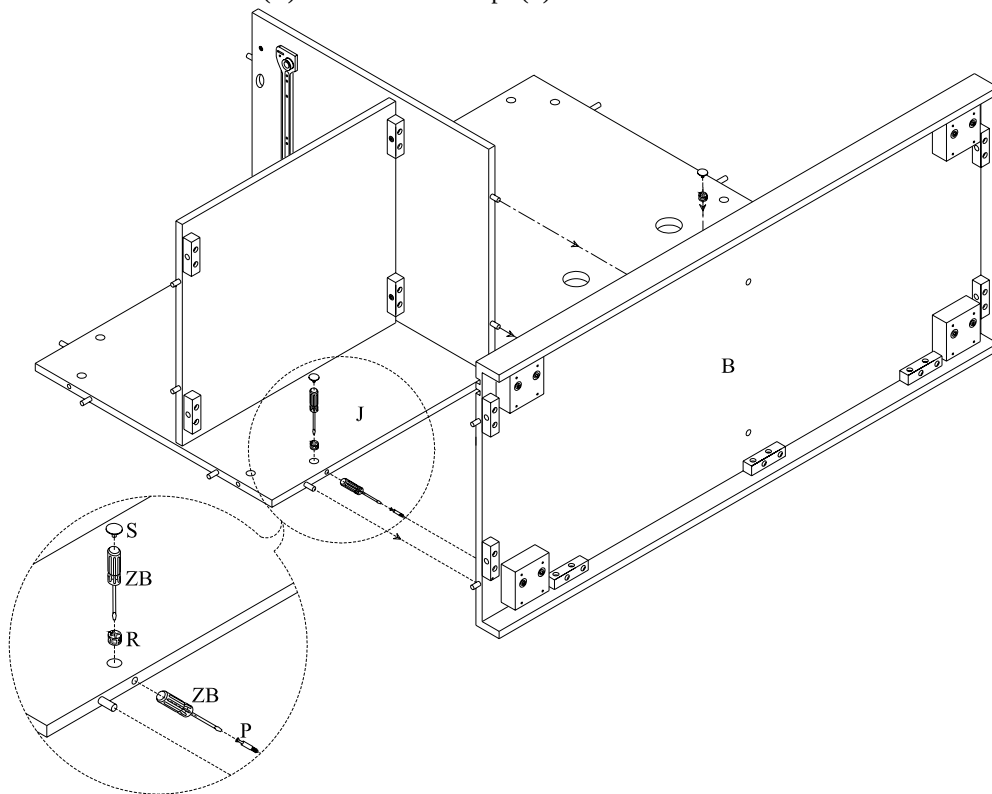


Illustration #2



1862030

Video Station-Chestnut

Attach Sides and Casters

Parts required

B.	Bottom	1 pc	S.	Plastic Caps	4 pcs
C.	Left Side Panel	1 pc	T.	Wood Screws	16 pcs
D.	Right Side Panel	1 pc	U.	Confirmat Screws	2 pcs
G.	Divider	1 pc	V.	Allen Head Bolts	6 pcs
H.	Fixed Shelf	1 pc	W.	Lock Washers	6 pcs
J.	Back Panel	1 pc	X.	Flat Washers	22 pcs
N.	Lock Casters	2 pcs	Y.	Allen Wrench	1 pc
O.	Back Casters	2 pcs	ZA.	Phillips Head Screwdriver	1 pc
P.	Connecting Bolts	4 pcs	ZB.	Flat Head Screwdriver	1 pc
R.	Eccentric Cams	4 pcs			

6. **Insert Connecting Bolts (P)** Insert the Connecting Bolts (P) into the pre-threaded holes in the Left, Right Sides (C,D) by using Flat Head Screwdriver (ZB). See Illustration #3.
7. **Attach Right, Left Side Panels (D,C)** Align the pre-drilled holes in the cleats of the Bottom (B) with pre-threaded holes in the Right Side Panel (D). Align the Connecting Bolts (P) in the Right Side Panel (D) with pre-drilled holes in the Back Panel (J). Make sure the dowels in the Back Panel (J) and Bottom (B) align with the holes in the Right Side Panel (D). Insert Allen Head Bolts (V) with Lock Washers (W) & Flat Washers (X) through the holes in the cleats of the Bottom (B) and secure into the pre-threaded holes in the Right Side Panel (D) by using Allen Wrench (Y). Insert the Eccentric Cams (R) into the pre-drilled holes in the Back Panel (J). Note: the arrow of Eccentric Cams (R) should point towards Connecting Bolts (P). Use the Flat Head Screwdriver (ZB) to adjust the Eccentric Cams (R) and lock the Connecting Bolts (P) in place by turning in a clockwise direction. Cover all the Eccentric Cams (R) with the Plastic Caps (S). Assemble the Left Side Panel (C) in the same manner as Right Side Panel (D). See Illustration #3.
8. **Attach Bottom (B) with Divider (G)** Align holes in the Bottom (B) with pre-drilled holes in the Divider (G). Insert the Confirmat Screws (U) through the Bottom (B) and secure into the Divider (G) by using Allen Wrench (Y). See Illustration #3.
9. **Attach Casters (N,O)** Align the holes in the plates of the Lock Casters (N) and Back Casters (O) with the pre-drilled holes in the Bottom (B). Note: make sure the Lock Casters (N) are towards front. Secure with Wood Screws (T) & Flat Washers (X) by using Phillips Head Screwdriver (ZA). See Illustration #3.

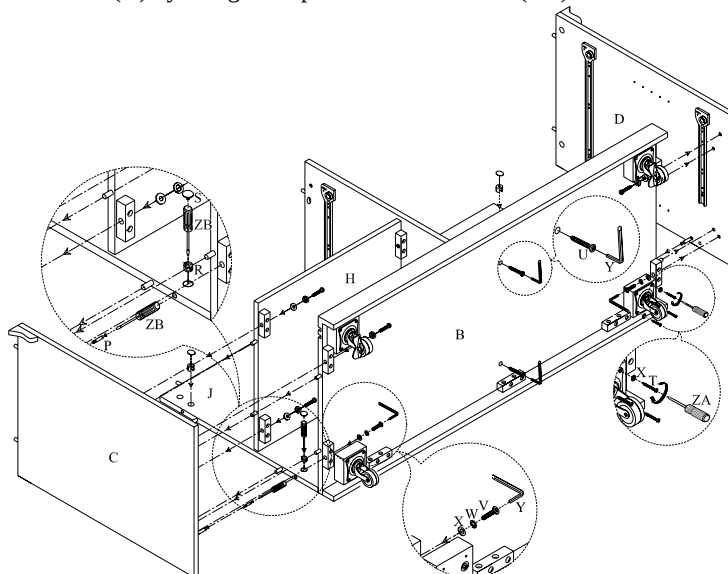


Illustration #3



1862030

Video Station-Chestnut

Attach Top and Doors

Parts required

A.	Top	1 pc	G.	Divider	1 pc
B.	Bottom	1 pc	J.	Back Panel	1 pc
C.	Left Side	1 pc	P.	Connecting Bolts	8 pcs
D.	Right Side	1 pc	R.	Eccentric Cams	8 pcs
E.	Left Door	1 pc	S.	Plastic Caps	8 pcs
F.	Right Door	1 pc	ZB.	Flat Head Screwdriver	1 pc

10. **Insert the Doors (E,F)** Insert the Left Door (E) into the back groove in the Bottom (B), and Right Door (F) into the front groove in the Bottom (B). See Illustration #4.
11. **Insert Connecting Bolts (P)** Insert the Connecting Bolts (P) into the pre-threaded holes in the Top (A) by using Flat Head Screwdriver (ZB). See Illustration #4.
12. **Attach Top (A) with Sides (C,D), Back Panel (J), and Divider(G)** Align the Connecting Bolts (P) in the Top (A) with the pre-drilled holes in the Back Panel (J), Divider(G), and Sides (C,D). Be sure the dowels in the Back Panel (J), Divider (G), and Sides (C,D) align with the pre-drilled holes in the Top (A). Make sure the Left Door (E) sits in the back groove of the Top (A) and Right Door (F) in the front groove of the Top (A). Insert the Eccentric Cams (R) into the pre-drilled holes in the Back Panel (J), Divider (G), and Sides (C,D). Note: the arrow of Eccentric Cams (R) should point towards Connecting Bolts (P). Use the Flat Head Screwdriver (ZB) to adjust the Eccentric Cams (R) and lock the Connecting Bolts (P) in place by turning in a clockwise direction. Cover all the Eccentric Cams (R) with the Plastic Caps (S). See Illustration #4.

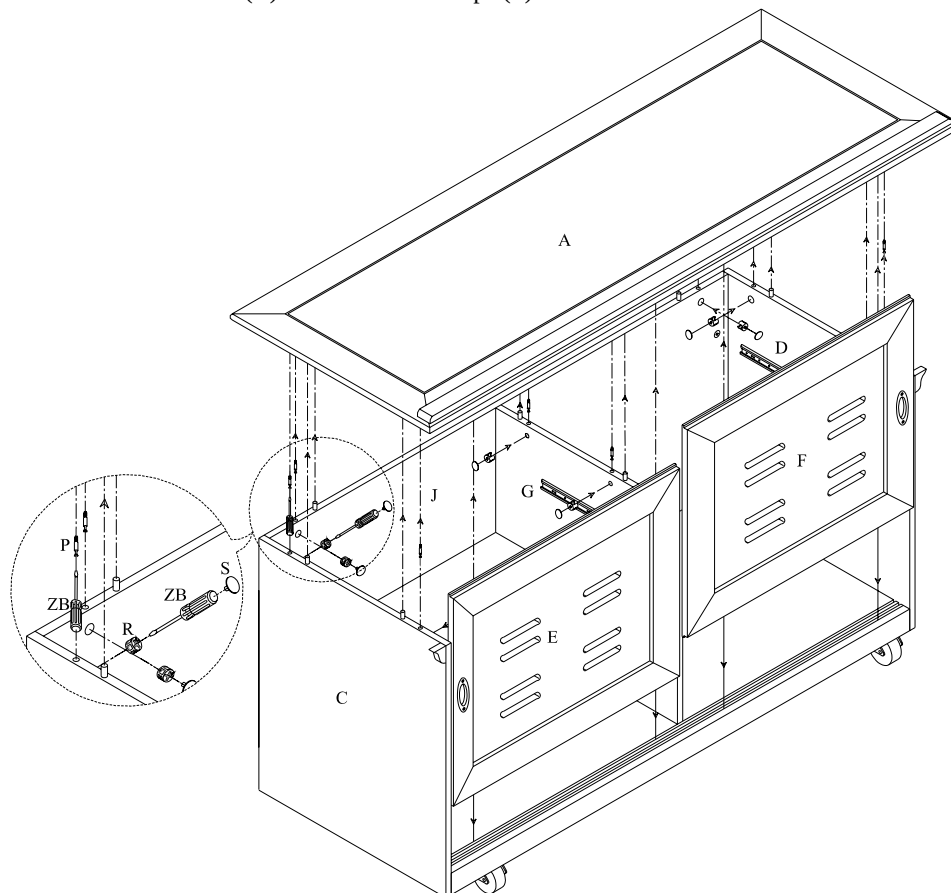


Illustration #4



1862030

Video Station-Chestnut

Attach Divider, Install Drawer

Parts required

C.	Left Side	1 pc	E.	Left Door	1 pc
G.	Divider	1 pc	M.	Drawer	1 pc

13. **Install the Drawer (M)** Push the Left Door (E) to the right. Place the Drawer (M) onto the glides of the Divider (G) and Left Side (C). See Illustration #5.

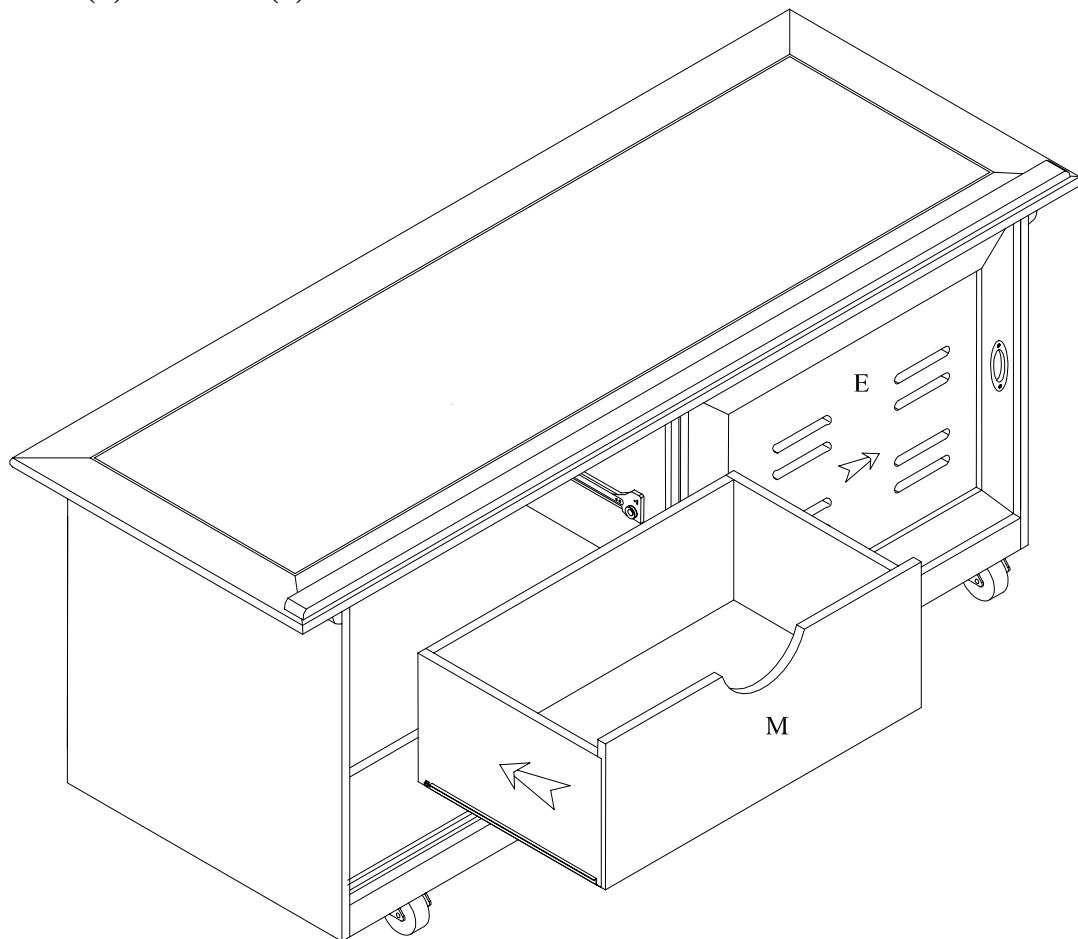


Illustration #5



1862030

Video Station-Chestnut

Install CD Tray and Console Tray

Parts required

A. Top	1 pc	G. Divider	1 pc
D. Right Side	1 pc	K. Console Tray	1 pc
F. Right Door	1 pc	L. CD Tray	1 pc

14. **Install the CD Tray (L) and Console Tray (K)** Push the Left Door (E) and Right Door (F) to the left. Place the CD Tray (L) and Console Tray (K) onto the glides of the Right Side (D) and Divider (G). See Illustration #6.

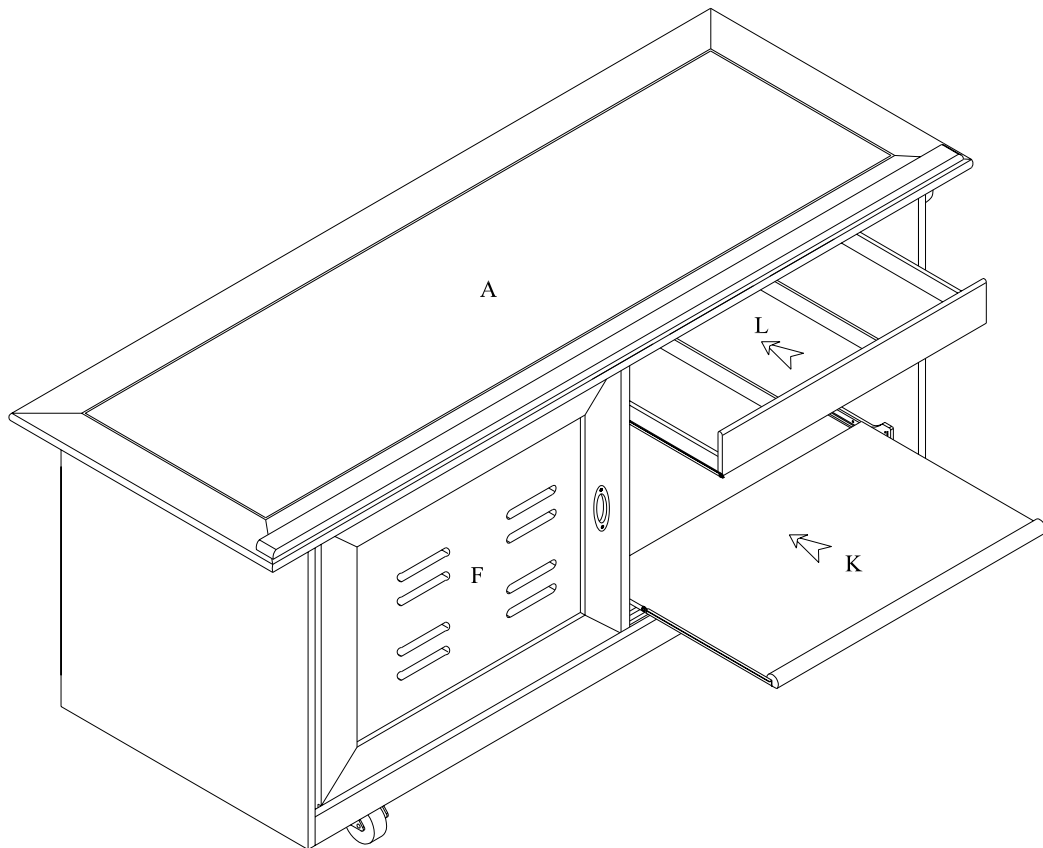


Illustration #6



1862030

Video Station-Chestnut

Install Adjustable Shelf

Parts required

D. Right Side	1 pc	I. Adjustable Shelf	1 pc
G. Divider	1 pc	Z. Shelf Supports	4 pcs

15. **Install the Adjustable Shelf (I)** Insert the Shelf Supports (Z) into desired holes in the Right Side (D) and Divider (G). Place the Adjustable Shelf (I) onto the Shelf Supports (Z). See Illustration #7.

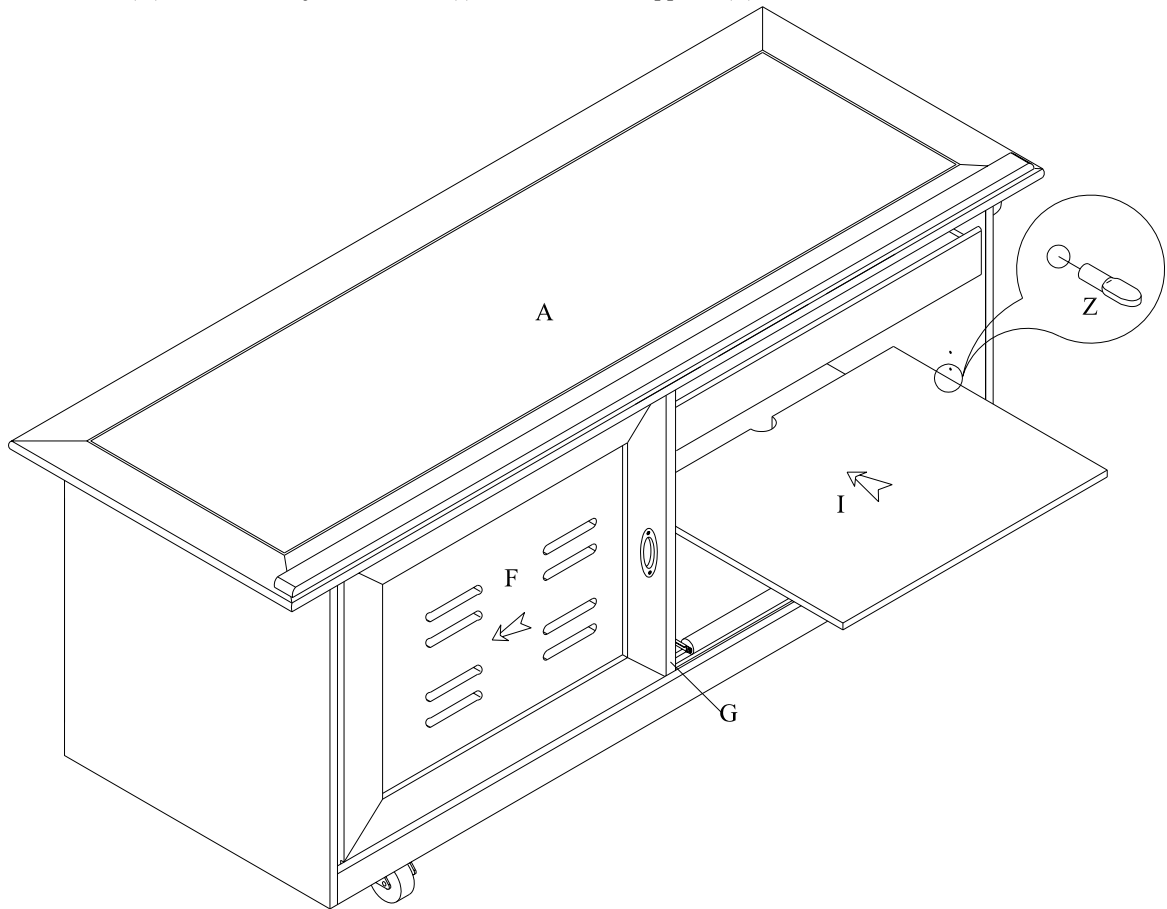


Illustration #7